


Apply one coat of ICB 'HA' adhesive mixed with sharp sand to Evalon face of membrane to provide key for mortar.

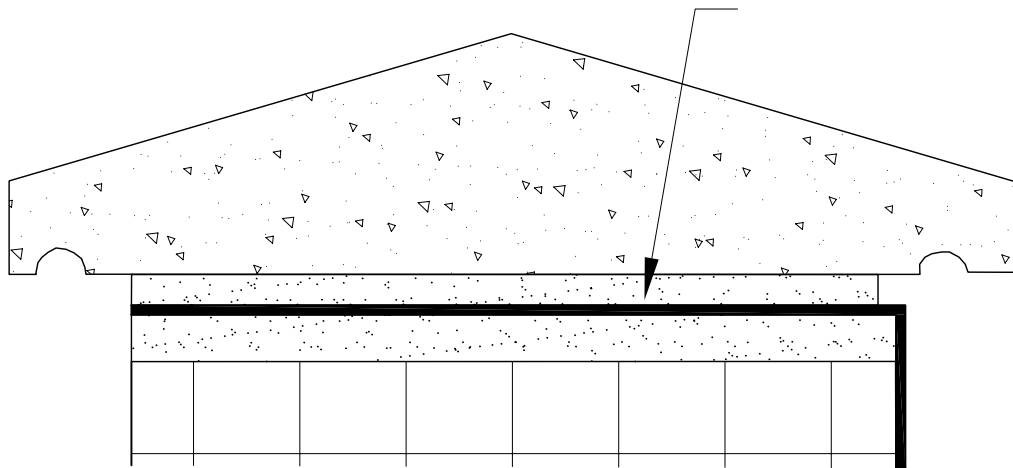

**Important Note:**  
For Evalon membrane use only.  
Not suitable for use with Evalastic membranes

**Note 1:-**

All Surfaces must be prepared as per ICB Ltd's Written Instructions, and in accordance with the Project Specification.  
All Adhesives must be used as per the Manufacturers' Instructions.